


2ATL24/30 Legs (ArcadeTable) Assembly Instructions

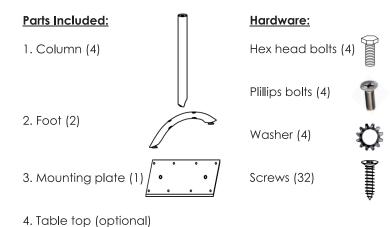


Tools Needed:


13mm rachet wrench or impact drill 3/8" hex bit 13mm socket 13mm wrench (for optional casters) #3 Phillips bit Safety glasses

> If you are missing parts or have any questions, please call Customer Service at 888.705-0777.

Base Assembly

5. Table support (optional)

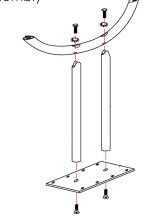

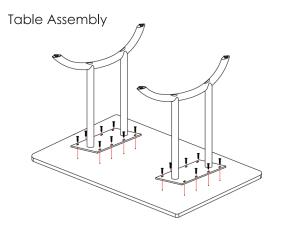

Instructions

Base Assembly

- Place the columns over the mounting plate lining up the holes in the columns and the mounting plate. Insert (1) phillips bolt through the mounting plate into each column. Use either #3 Phillips bolt with rachet wrench or impact drill to tighten the bolts as much as possible.
- 2. Set mounting plate on the floor with the bottom of the columns up. Place the foot over the columns lining up the holes in the foot and the column. Insert (1) hex head bolt and washer through the foot and into each column. Use either 13mm rachet wrench or impact drill to tighten bolt as much as possible.

Table Assembly:

- 1. Lay table top upside down on cardboard or carpeted surface.
- Position assembled legs at the edges and align mounting plates with pre-drilled holes in the top. Use every hole in the mounting plate to attach the legs with screws.
- 3. If table stiffener is provided, attach it in the center of the table between the legs.
- 4. Holding onto the edges of the top, carefully turn the table over in the upright position. Enjoy your table!