 


ATUL Base/Table Assembly Instructions

Parts Included:

1. Bases (2)



2. Mounting plate (2)



3. Hardware Flat head bolts (4)



Screws (16)



4. Table top (optional)


5. Table support (optional)

Tools Needed:

Phillips screw driver or impact drill
#3 Phillips bit
Safety glasses

If you are missing parts or have any questions about the product, please call Customer Service at 888-705-0777.

Instructions

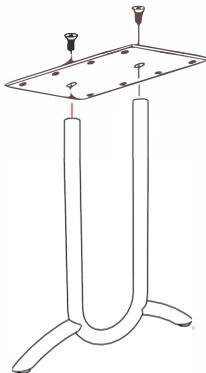

Base Assembly

1. Place mounting plate over the columns lining up the holes in the columns and the mounting plate. Insert (1) flat head bolt through the mounting plate into each column. Start the bolts by hand to avoid cross threading. Use either Phillips screw driver or impact drill to tighten the bolts as much as possible.

Note: To install optional decorative panel, slide the panel between the columns with the front facing the outside of the table, then attach mounting plate.

Note: ATUL-42 base for table is fully assembled.



START BOLTS BY HAND TO PREVENT CROSS THREADING

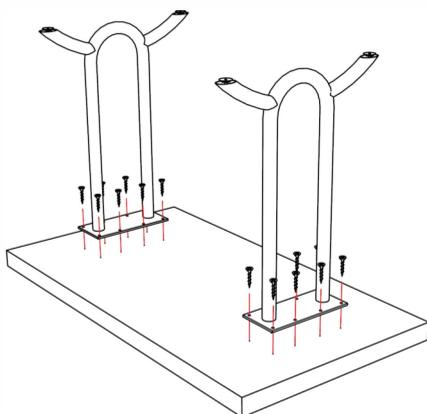


Table Assembly

1. Lay table top upside down on cardboard or carpeted surface.
2. Position bases on table edges and align holes in mounting plates with the pre-drilled holes in the table top. Use every hole in the mounting plate to attach the legs with screws.
3. Use Phillips screwdriver or impact drill to install wood screws through the base in table top. Fully tighten screws.
4. If steel table support is provided, attach it in the center of the table between the bases.
5. Holding onto the edges of the top, carefully turn the table over in the upright position. Level tables by adjusting the glides on the bottom of each base. Enjoy your table!