



MONO PNEUMATIC Height Adjustable Star Table Assembly Instructions

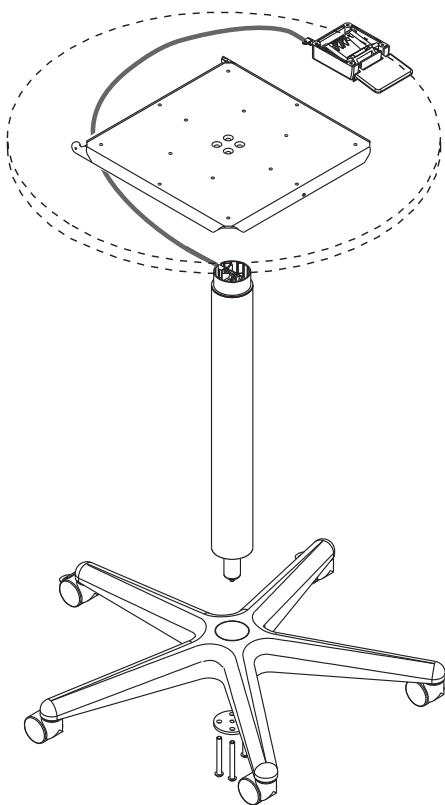

Attention:

*Special dry clean requirement:
Do not grease or clean with solvents.*

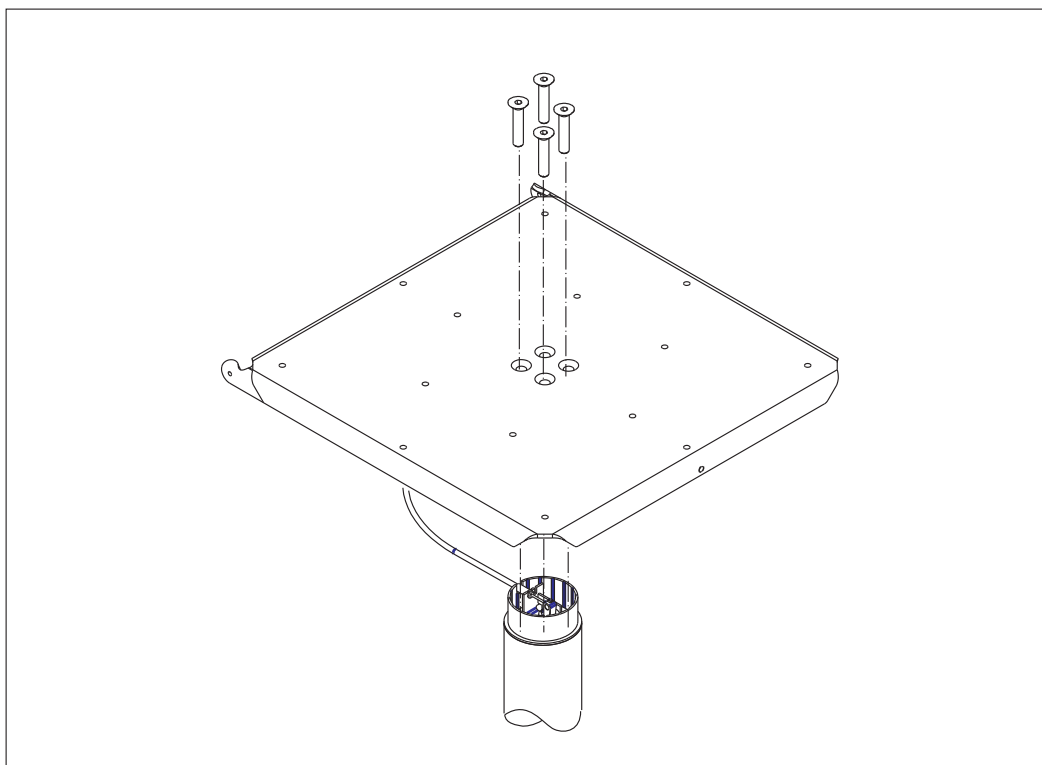


Parts

M8x40




4x

SW5



max. 10 Nm

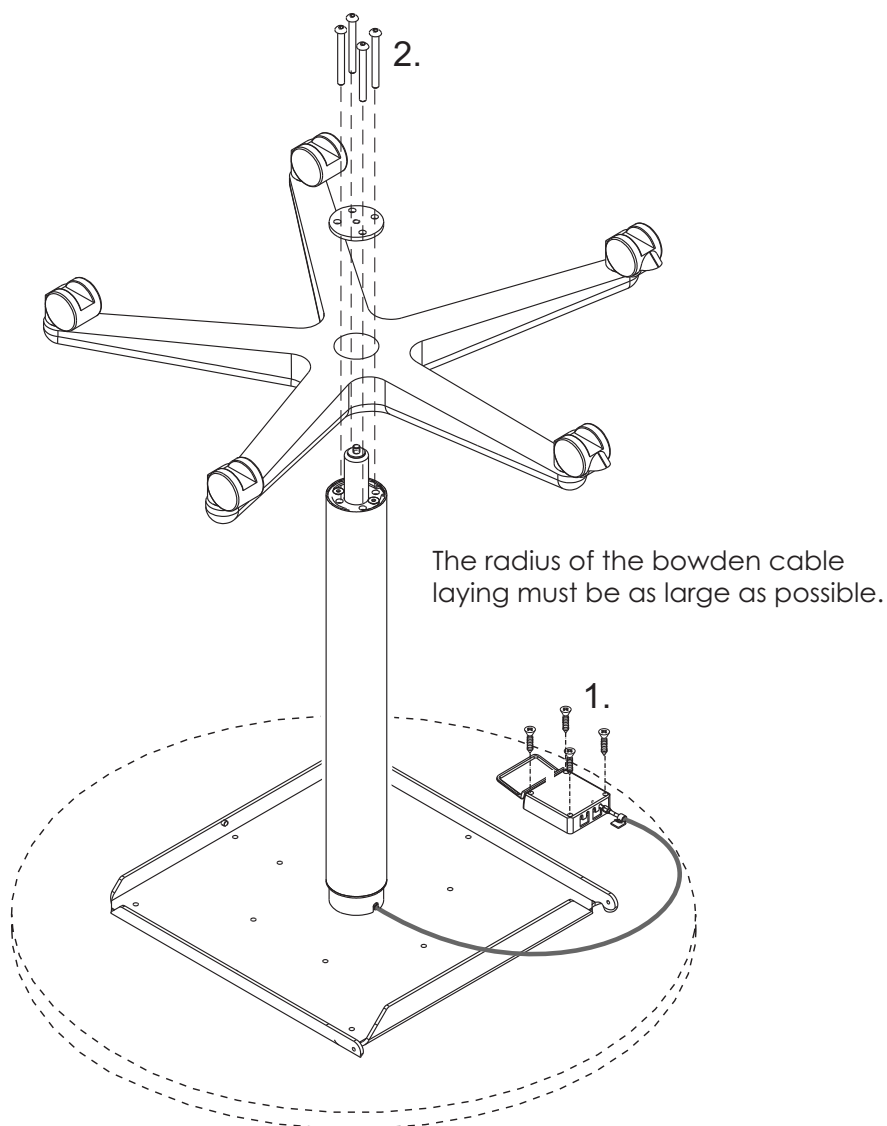


M8x70



X4


SW5



max. #10



Attention! Do not activate the actuation mechanism, unless the desk is completely assembled and the tabletop is mounted. Incorrect use can lead to injuries! Otherwise risk of injury

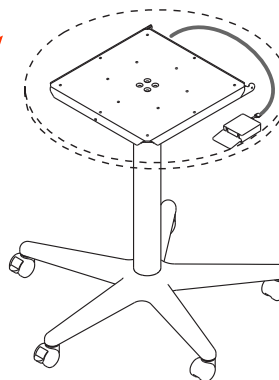

Attention:
Special dry clean requirement:
Do not grease or clean with solvents.

Cleaning recommendations for powder-coated surfaces

For optimal care and cleaning of powder-coated surfaces the following recommendations should be followed:

- Use only a soft cloth or industrial cotton wool. Refrain from rubbing hard.
- Surface and cleaning agent temperatures <25°C. (Do not steam clean surface.)
- Clean slight staining with clear water (cold or lukewarm), small amounts of neutral or alkalescent detergent additives may be used, if necessary.
- Stubborn staining, such as greasy or oily substances, may require the use of benzene hydrocarbons which are free of aromatic compounds (test previously in a hidden surface).
- Do not apply detergent for extended periods of time. If necessary repeat cleaning process after 24 hours.
- Rinse well with cold, clean water immediately after cleaning.
- Do not use scratching, abrasive agents.
- Do not use acidic or strongly alkaline detergents and surfactants.
- Do not use organic solvents which contain ester, ketone, alcohols, aromatic compounds, glycol ether, halogenated hydrocarbons or similar substances.